



Stroker Ryde Lever Pivot Pin Replacement

Warning: When installing any of the disc brake components, installation work should be done by a qualified technician with the proper tools. Improper installation could cause severe or fatal injuries.

Stroker Ryde Lever Pin Removal

1. Locate the lever pivot pin and lever pivot pin spring retaining clip. (Figures 1 and 2)
2. Carefully remove the spring clip from one side of the lever pivot pin.
Warning: Always wear protective eyewear when removing or installing spring clips.
3. Push the lever pivot pin through the lever.

Stroker Ryde Lever Pin Installation

4. Insert the new lever pivot pin through the master cylinder and lever blade. (figure 3)
Note: The pin should be inserted so the flange is on the upper side of the master cylinder. (Figure 4)
5. Install the new spring clip to secure the lever pin.
Note: The spring clip should sit securely in the groove on the pivot pin. (Figure 4)
Warning: Always wear protective eyewear when removing or installing spring clips.

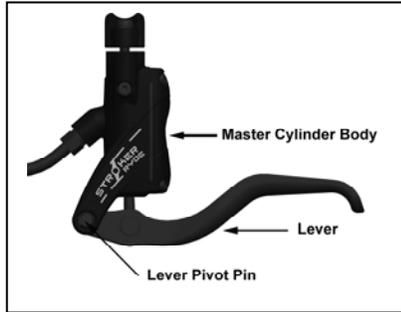


Figure 1. Location of lever pivot pin.



Figure 3. Insert the new lever pivot pin.

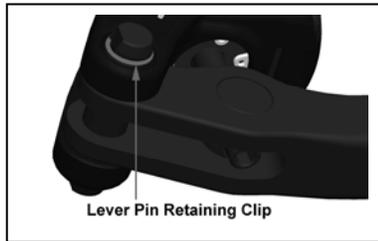


Figure 2. Location of lever pivot pin retaining clip.

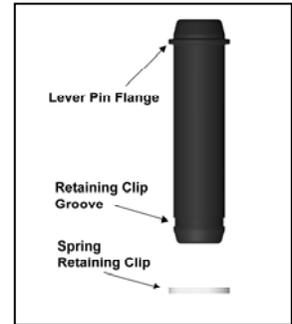


Figure 4. New lever pivot pin features.



5800 W. Donges Bay Road. Mequon WI, 53092 Phone: (888) 686-3472 Fax: (262) 512-4219
www.hayesdiscbrake.com hayestech@hayesbicycle.com



Stroker Ryde Lever Pivot Pin Replacement

Warning: When installing any of the disc brake components, installation work should be done by a qualified technician with the proper tools. Improper installation could cause severe or fatal injuries.

Stroker Ryde Lever Pin Removal

1. Locate the lever pivot pin and lever pivot pin spring retaining clip. (Figures 1 and 2)
2. Carefully remove the spring clip from one side of the lever pivot pin.
Warning: Always wear protective eyewear when removing or installing spring clips.
3. Push the lever pivot pin through the lever.

Stroker Ryde Lever Pin Installation

4. Insert the new lever pivot pin through the master cylinder and lever blade. (figure 3)
Note: The pin should be inserted so the flange is on the upper side of the master cylinder. (Figure 4)
5. Install the new spring clip to secure the lever pin.
Note: The spring clip should sit securely in the groove on the pivot pin. (Figure 4)
Warning: Always wear protective eyewear when removing or installing spring clips.

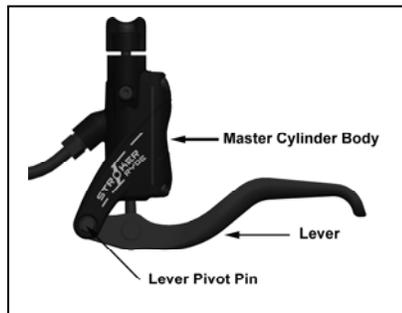


Figure 1. Location of lever pivot pin.



Figure 3. Insert the new lever pivot pin.

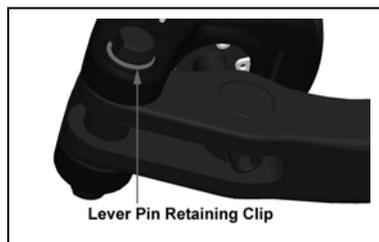


Figure 2. Location of lever pivot pin retaining clip.

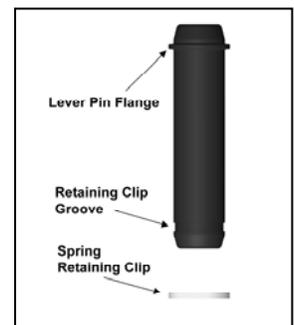


Figure 4. New lever pivot pin features.



5800 W. Donges Bay Road. Mequon WI, 53092 Phone: (888) 686-3472 Fax: (262) 512-4219
www.hayesdiscbrake.com hayestech@hayesbicycle.com