


## GAS CHARGE TOOL

### SETUP INSTRUCTIONS

Connect the 1/4" NPTF fitting on the gas charge block to a nitrogen tank with a regulator and on/off valve.

### GAS CHARGE INSTRUCTIONS

1. Close valve to the nitrogen tank, thread Schrader pin out all the way and remove the eyelet pin.
2. Insert shock with the Schrader valve facing the Schrader pin.
3. Thread the eyelet pin all the way in until it reaches a hard stop to hold the shock in place.
4. Thread the Schrader pin in until it reaches a hard stop to depress the Schrader valve.
5. Open the valve to the nitrogen tank that is set to the correct pressure. Verify pressure using the block pressure gauge, then close the valve.
6. Thread the Schrader pin all the way out to the snap ring to close the Schrader valve on the shock.
7. Depress the Schrader valve on the block to release pressure.
8. Remove the eyelet pin (This is also a safe means of relieving block pressure)

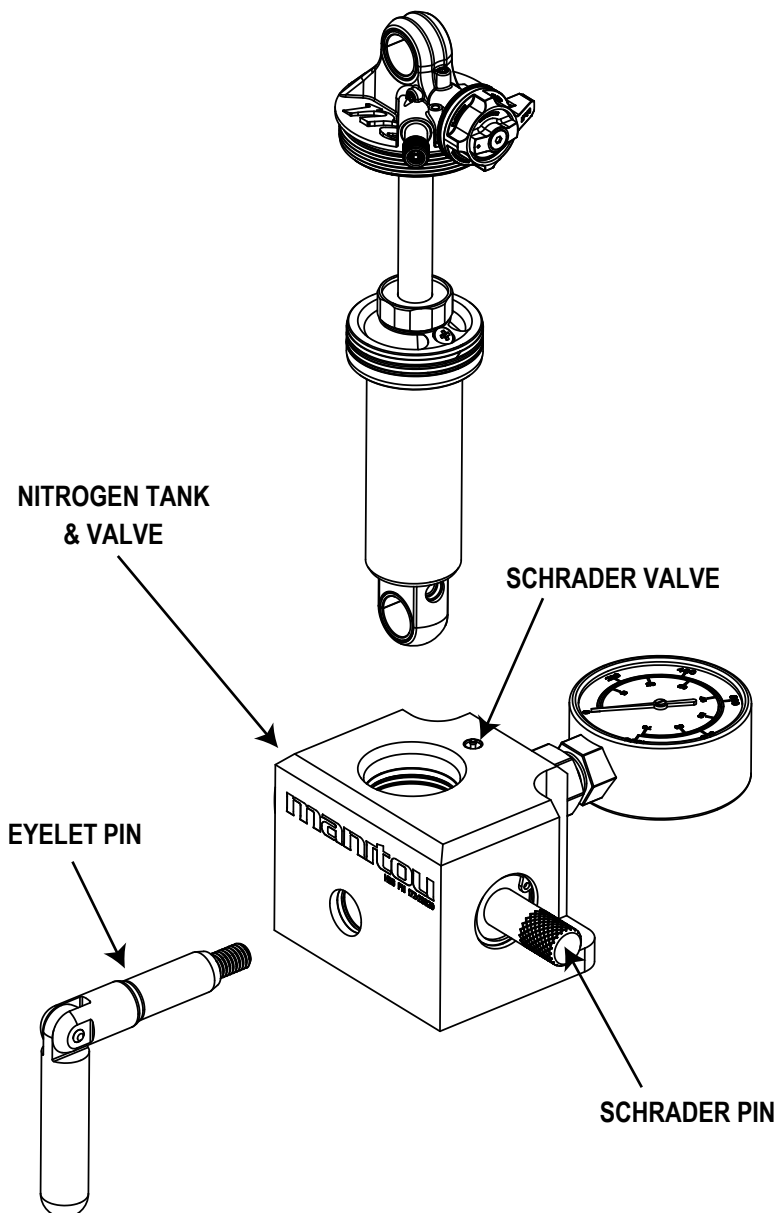

For further instructions on service tool usage watch the McLeod Service videos at:  
[www.manitoumtb.com/support/](http://www.manitoumtb.com/support/)