DOMINION A2 / T2 SERVICE & BLEED GUIDE



MANITOU

5800 W Donges Bay Rd Mequon, WI 53092

manitoumtb.com

888.686.3472

Support: manitoumtb.com/support

WARRANTY

For full warranty information please visit <u>hayesbicycle.com/warranty</u>









Limited Warranty:

HAYES warrants its products to be free from defects in materials or workmanship under normal intended use for a period of one year (two years in European Union countries) from the date of purchase, subject to normal wear and tear. Unless otherwise prohibited by law, any such defective products will be repaired or replaced at the option of HAYES when received with proof of purchase, freight prepaid. This warranty does not cover breakage, bending, or damage that may result from crashes or falls. This warranty does not cover any defects or damage caused by alterations or modifications of HAYES products or by normal wear, accidents, improper maintenance, damages caused by the use of HAYES products with parts of different manufacturers, improper use or abuse of the product, application or uses other than those set forth in the HAYES instruction manual or failure to follow the instructions contained in the applicable HAYES instruction manual. Instruction manuals can be found on-line at www.hayescomponents.com. Any modifications made by the BUYER or any subsequent user will render the warranty null and void. This warranty does not apply when the serial number or production code has been deliberately altered, defaced or removed from the product. The cost of normal maintenance or replacement of service items, which are not defective, shall be the BUYER's responsibility. If permitted by local law, this warranty is expressly in lieu of all other warranties (except as to title), express or implied, and in particular and without limitation HAYES disclaims the implied warranties of merchantability or fitness for purpose If for any reason warranty work is necessary, return the component to the place of purchase or contact your dealer or local HAYES distributor. In the USA, contact HAYES for a return authorization number (RA#) at (888) 686-3472. At that time, instructions for repair, return, or replacement shall be given. Customers in countries other than the USA should contact their dealer or local HAYES distributor.

Limitation of Liability.

Unless required by mandatory law, HAYES shall not be liable for any incidental, indirect, special or consequential damages.

This warranty does not apply to normal wear and tear. Wear and tear parts are subject to damage through normal use, failure to service according to recommendations or riding in conditions other than recommended. The cost of normal maintenance or replacement of service items, which are not defective, shall be paid for by the original purchaser. Wear and tear parts that will not be replaced under warranty include but are not limited to the following:

Bushings	Bushings Dust Seals Stripped or Worn Bol	
Rear Shock	Air Seals and/or O-rings	Remote Lockout Cable
Mount Hardware	Bearings	Gloves
Handlebar grips	Upper Stanchion Tubes	Lower Stanchion Tubes(Dorado)
Tubeless Valves	Tubeless Tape Pads	
Rotors		



INTRODUCTION

This manual is intended to provide the information necessary for installation, set-up, normal maintenance and service of the Hayes Dominion A2 disc brake system. We highly recommend installation be performed by a qualified mechanic. These instructions can be downloaded from the Hayes Disc Brake website at www.hayesdiscbrake.com

AWARNING

We highly recommend that service to this brake be performed by a certified bicycle mechanic. Failure to follow instructions presented in this manual could lead to serious injury or death. Any questions about the servicing of this brake or the manual itself should be directed to Hayes Customer Support at:

Hayes	5800 W Donges Bay Road Mequon WI 53092
Bicycle	Phone: 888.686.3472
USA	Email: techsupport@hayesbicycle.com

Hayes	Hayes Dirnismaning 20 a 85748 Garching (b. Munich) Germany	
Bicycle	Phone: +49 89 203237450	
Europe	Email: techsupportEU@hayesbicycle.com	

Hayes 16F, No. 37, Sec. 3 Mincyuan E. Rd. Zhongshan District Taipei City 10476 Taiwan ROC	
Bicycle	Phone: 886-2-2518-1108
Asia	



SAFETY INFORMATION

As a serious rider you are well aware of the need to practice safety in all aspects of the sport. This includes service and maintenance practices as well as riding practices. Before each ride, always check your brakes for proper function and the brake pads for wear. When you ride, always wear a helmet.

🛕 WARNING 🛕

When you need to install any of the disc brake components, that installation work should be done by a qualified technician with the proper tools. Improper installation could cause severe or fatal injuries.

AWARNINGA

This brake has been designed for use on a single person mountain bike. The use on any other vehicle or device will void the warranty and can cause serious injury.

🛕 WARNING 🛕

With use, disc brake components may become very hot. Always allow components to cool before attempting to service your bike.

AWARNINGA

When following any of the procedures below, be sure to keep your hands and fingers from getting caught in the disc. Failure to do so could result in injury.

🛕 WARNING 🛕

Do not adjust the caliper while the wheel is spinning.

🛕 WARNING 🛕

Do not adjust the caliper while the caliper is hot.

🛕 WARNING 🛕

If your bike is involved in a fall or crash it is recommended your brakes are checked by a qualified mechanic before riding to ensure they are functioning properly. The following checks should be performed: Check that all components are securely mounted to the handlebar, frame, fork, or wheel; check for proper pad installation and retention; check that the brake builds and holds pressure; check hose and fittings for kinks or leaks; check master cylinder body and caliper for damage. Always have a qualified bike mechanic check your brakes if you suspect damage.

🛕 WARNING 🛕

The Hayes Dominion A2 brake system uses DOT 5.1 fluid. Any spilled on the brake assembly, bike or otherwise should be cleaned up with isopropyl alcohol. The brake rotor and pads should only be cleaned with isopropyl alcohol (not disc brake cleaner).



TABLE OF CONTENTS

SECTION	PAGE NUMBER
Master Cylinder Service	8
Caliper Rebuild	11
Bleed Instructions	17
Expolded Diagrams	23



TOOLS AND MATERIALS

Below is a list of tools and materials necessary for installing Dominion A2 brakes.

- Safety Glasses
- Nitrile Gloves
- Isopropyl Alcohol
- Lint-Free Rags
- Plastic Pick
- 5mm Hex Wrench
- 4mm Hex Wrench
- 2.5mm Hex Wrench
- Torx T10 Wrench
- T10 Torx Bit
- T30 Torx Bit
- 2.5mm Hex Bit
- 4mm Hex Bit
- Torque Wrench
- Hayes DOT 5.1 Bleed Kit (Hayes Part Number 98-36770)
- Dominion A2 Caliper Rebuild Kit (Hayes Part Number 98-36140-K101)
- Hydraulic Hose Cutter
- 8mm Flair Nut Wrench
- 8mm Crows Foot
- Ratchet
- Compressed Air With Rubber Tipped Nozzle



MASTER CYLINDER SERVICE



2

3

Hose Removal

Using an 8mm flair nut wrench, loosen and remove the hose nut from the master cylinder (MC). Slide it down the hose.









Pull the hose out of the MC. There will be residual fluid in the master cylinder body. Be careful to avoid spilling the fluid.

A new hose insert/compression bushing combination will be needed each time the hose is re-installed. Remove the old hose insert by cutting the hose next to it. The cut needs to be clean with no frayed ends.

MASTER CYLINDER SERVICE



Hose Assembly

Cut the hose to desired length using hose or cable cutters. The cut end must be clean and perpendicular to itself.



2

3

Slide the hose nut onto the hose.



Push the end of the barbed hose insert into the end of the hose. To ensure your bushing is fully seated mark your hose three millimeters down from your cut, push your bushing onto the hose using the side of your workbench until it reaches your mark. Always use a new hose insert/compression bushing.





MASTER CYLINDER SERVICE

4 Slide the hose into the MC and install the hose nut. Be sure that the hose is inserted completely into the master cylinder. Be sure that the hose remains inserted while tightening the hose nut down.



5


6

page 17)

Using an 8mm crows foot, torque the hose nut to 70 \pm 5 in lbs [7.9 \pm 0.5 N m]

Bleed the system. (NOTE: See Bleed Instructions on



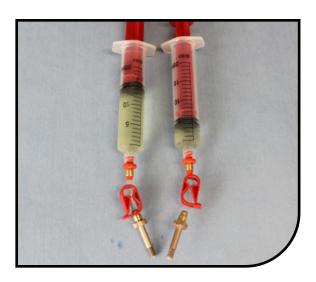





2

3

Piston Removal

Remove the caliper from the bike by removing the two M6x1.0 x 18.4mm mounting bolts using a 5mm hex wrench.









If there is nothing wrong with the hose and the hose fitting, completely remove the caliper hose assembly using a 4mm hex wrench.

Remove the two bridge bolts - with a T30 Torx wrench. When you remove the two bridge bolts, the caliper will come apart into two pieces. There will be an inner and an outer caliper half and an O-ring between.

HYES

4


5


6

Take the transfer port 0-ring out and inspect it for any cuts or debris. This 0-ring may be reused when the caliper is put back together.

NOTICE

Do not scratch 0-ring groove when removing the 0-ring, as this could cause the 0-ring to leak.

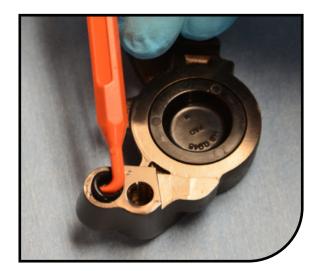

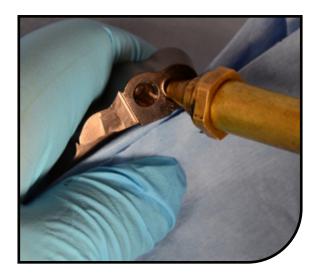





Remove the pistons from the caliper with pressurized air. Avoid chipping the piston. Ensure bleed plug is installed, angle the caliper so the piston is facing downward, then direct pressurized air thru the hole that connects the two halves together. Be sure you are blowing the piston into a clean rag. The air pressure will force the piston out at a high rate of speed.


Carefully remove the square seal from inside the piston bore. The replacement kit will consist of a new piston and square seal.

NOTICE


Scratching the sealing surface of the piston bore can cause leaking. To prevent this use a plastic pick to extract the piston seals.

7

Remove the piston and square seal from the opposing caliper half in the same way.

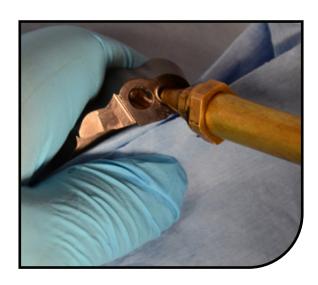



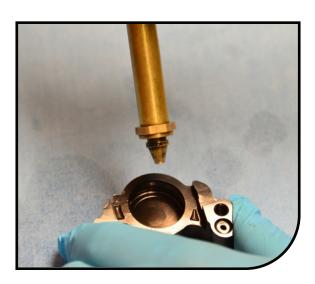

8

9

Clean all of the parts. Spray each part with isopropyl alcohol . Be sure to clean the caliper through all of the holes.

Wipe down each part to remove the residue. Then use compressed air to blow dry and remove all of the remaining dirt, etc. For both caliper halves, be sure to blow compressed air through both the bleeder hole and the transfer port, and all around the square seal groove. Take extra care to get the square seal grooves free of any hair, dirt, scratches, etc. that could cause the caliper to leak.





2


3

Piston Assembly

Begin re-assembly of the caliper by lightly lubricating the new square seals with Hayes DOT 5.1 fluid and installing the new seals in the caliper halves.



Carefully push the square seal into its seal groove – making sure that the seal is worked into the groove all of the way around and that it is pushed all of the way to the back of the seal groove.

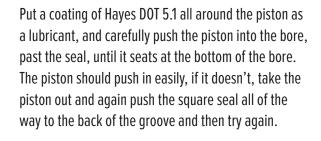











Caliper Assembly

Place the Transfer port O-ring into the O-ring seat in the inner caliper half.

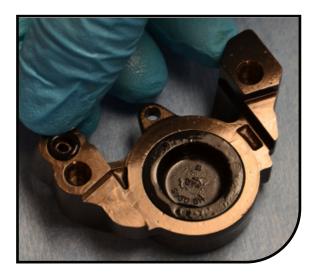

Put the two caliper haves together and install the bridge bolts. Torque the bridge bolts to 170 in lbs +/- 5 in lbs [19.2 N m +/-0.5 N m]



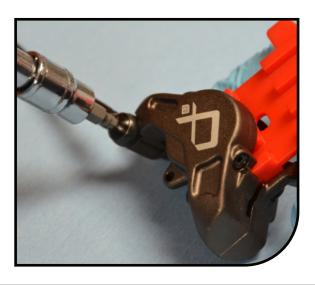


3

2

Reattach the hose to the caliper. Torque the Bajo bolt to: 60 in lbs +/- 5 in lbs [6.78 N m +/-0.5 N m]

4

Bleed the system. (NOTE: See Bleed Instructions on page 17)

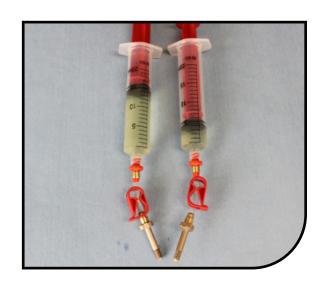



1 Clamp another handlebar into a repair stand and attach your MC. Position the bar so that it is 45 degrees from horizontal and position the master cylinder (MC) 45 degrees from the bottom of the bar. This positions the bleed port at the highest point of the reservoir.







3

Using a 2.5mm hex key remove the pad pin from your caliper and remove the pads. Push the pistons back fully. Make sure the caliper is vertical when bleeding.


Fill space in caliper with dummy pads and bleed block or something else. If nothing is available then be careful during bleed not to advance the pistons.



Fill a syringe 3/4 full of DOT 5.1 fluid, eliminate all air from syringe, and close hose clip.Place the caliper slightly lower than the MC, and remove one of the bleed screws using a T10 Torx wrench.Attach the syringe to the caliper bleeder.





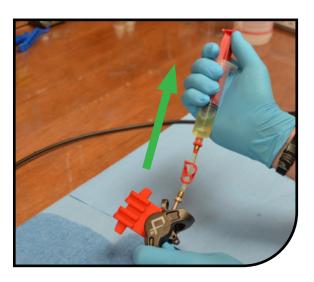



5


6

Fill second syringe 1/4 full of DOT 5.1 fluid, eliminate all air from syringe, and close hose clip. Remove the MC bleed screw using a T10 Torx wrench and attach to the MC bleeder.


Open both syringe hose clips and pull a small vacuum at the caliper syringe to pull any air that was introduced.



Push all DOT 5.1 fluid from caliper syringe to MC syringe, then return. Repeat until no bubbles are found.

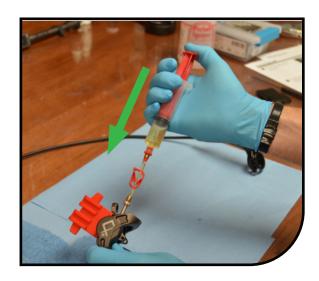



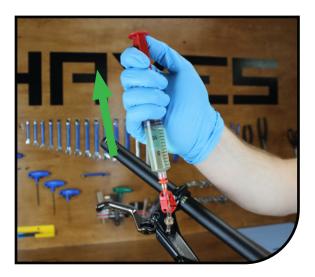

8

Push DOT 5.1 fluid from caliper syringe to MC syringe while flicking the lever several times, then return.

9


Pull a vacuum at the MC syringe while keeping the plunger of the caliper from advancing to remove any remaining bubbles.




11


12

Once there are no air bubbles, push all the DOT 5.1 fluid 10 from the caliper syringe to the master cylinder while flicking the lever several times, and then return the DOT 5.1 fluid back.

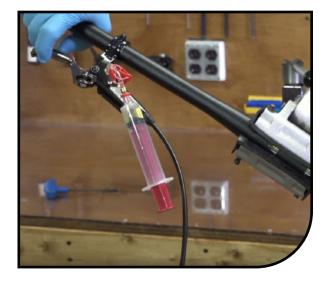



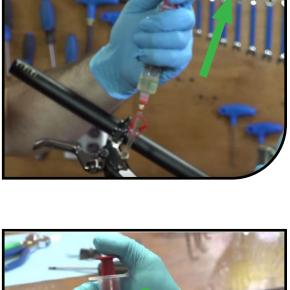

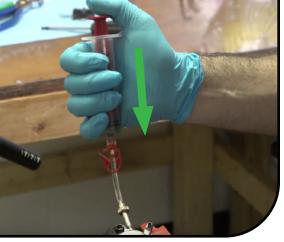




Pull a slight vacuum at the master cylinder while keeping the plunger of the caliper syringe from advancing to remove any remaining air bubbles and then add positive pressure by slightly depressing the plunger of the syringe.


Add positive pressure from the caliper syringe, close the hose clip on both syringes, and remove the syringe from the caliper.


13

Re-install the bleed screw using a T10 torx and torque to 12 in lbs [1.5 N m]. If no air remains in the system then skip to step 14. If air remains see *optional steps below.



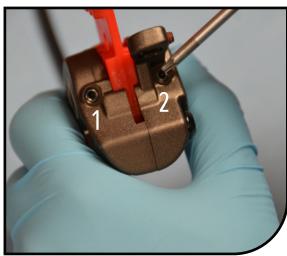

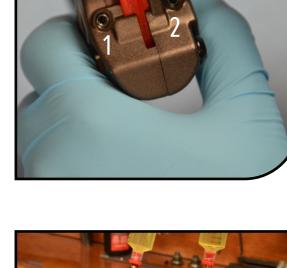

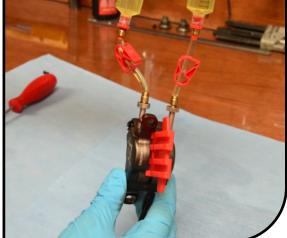

A

B

*Optional Two Stroke Features:

If air has been introduced into the system from a caliper rebuild you can utilize our Two Stroke Caliper technology to remove all air. With the caliper lower than the MC, remove the second bleed screw and repeat the entire bleed process.

The Two Stroke system also allows you to ensure that all air is removed form the caliper by performing a DOT 5.1 fluid flush of the caliper only. Simply follow the same bleed procedure as before but with both syringes attached to each bleed port on the caliper. Remember to add positive pressure to each syringe before removing at the end of the bleed.




15

Add slight positive pressure to the MC syringe, close the hose clip, and remove the syringe from the master cylinder. Install the bleed screw using your T10 torx and torque to 12 in lbs [1.5N m]. Clean your MC and caliper with isopropyl alcohol and check the brake for proper function.

Re-install your pads and tighten pad pin using 2.5mm

hex, torque to 10 +/- 1 in lbs [1.13 +/- 0.11 N m]

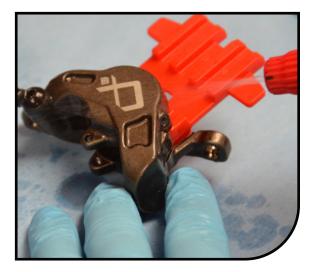




NOTICE

Performing the proper burnish process is essential to ensure that your new brakes have consistent, high power braking in all riding conditions. Hard braking before proper burnish can result in a reduction in brake performance. A proper burnish, or break in process of 50+ stops under 15 mph or 24 Km/h is required in order to reach full braking power.



MASTER CYLINDER EXPLODED VIEW

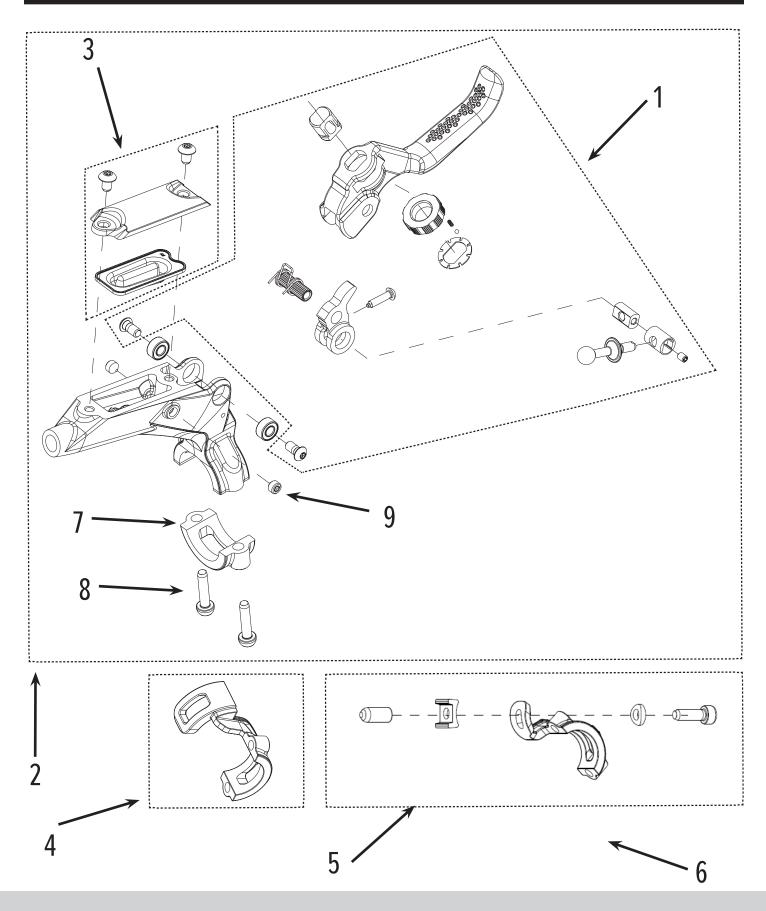


+++=FES

MASTER CYLINDER PARTS LIST

ITEM #	PART DESCRIPTION	KIT NUMBER
1	Dominion Bronze Lever Assembly Kit	98-36117-K001
	Dominion Grey Lever Assembly Kit	98-36117-K002
	Dominion Purple Lever Assembly Kit	98-36117-K003
	Dominion Bronze SFL Lever Assembly Kit	98-36117-K101
	Dominion Grey SFL Lever Assembly Kit	98-36117-K102
	Dominion Carbon Left Lever Assembly Kit	98-36117-K201
	Dominion Carbon Right Lever Assembly Kit	98-36117-K202
	Dominion Black/Bronze Master Cylinder Assembly Kit	98-36118-K001
	Dominion T Black Left Master Cylinder Assembly Kit	98-36118-K002
2	Dominion T Black Right Master Cylinder Assembly Kit	98-36118-K003
2	Dominion Black/Grey Master Cylinder Assembly Kit	98-36118-K004
	Dominion Black/Bronze SFL Master Cylinder Assembly Kit	98-36118-K101
	Dominion Black/Grey SFL Master Cylinder Assembly Kit	98-36118-K102
3	Dominion Composite Reservoir Cap Kit	98-36136-K101
4	Dominion Black Pearl Peacemaker Kit, I-Spec II/EV	98-36137-K001
4	Dominion Stealth Black Peacemaker Kit, I-Spec II/EV	98-36137-K003
F	Dominion Black Pearl Peacemaker Kit, SRAM	98-36137-K002
5	Dominion Stealth Black Peacemaker Kit, SRAM	98-36137-K004
6	Dominion Black Pearl Peacemaker Kit, SRAM Left	98-36137-K005
	Dominion Stealth Black Peacemaker Kit, SRAM Left	98-36137-K006
7	Dominion Standard Clamp Kit, Black Pearl	98-36137-K501
	Dominion Standard Clamp Kit, Stealth Black	98-36137-K502
8	Dominion Titanium Clamp Screws Kit	98-40587
9	Bleed Plug 10 Pack Kit	98-21972



CALIPER EXPLODED VIEW

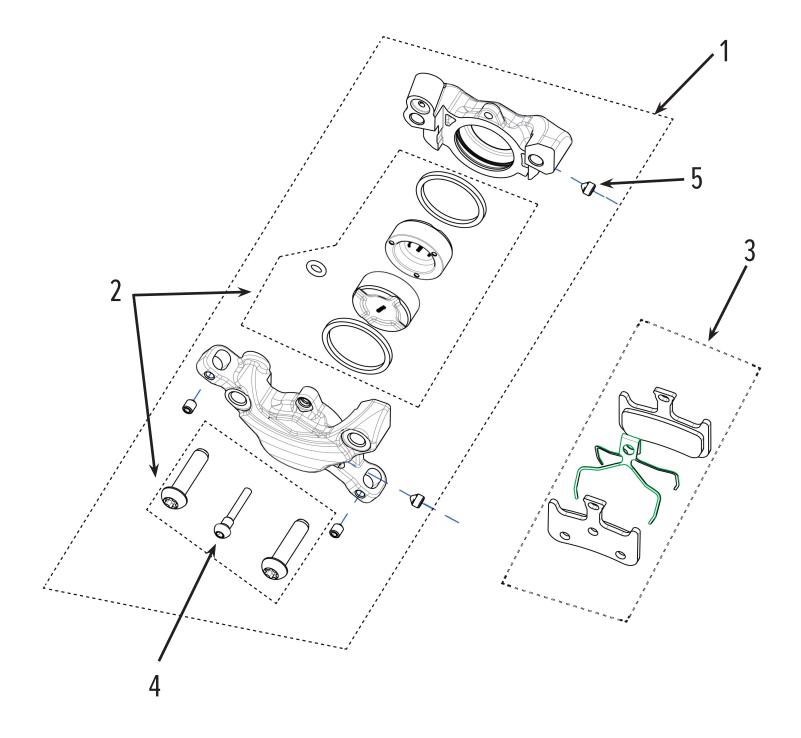




CALIPER PART LIST

ITEM #	PART DESCRIPTION	KIT NUMBER
	Dominion A2 Bronze Caliper Kit	98-36139-K101
1	Dominion A2 Black Caliper Kit	98-36139-K102
	Dominion T2 Black Caliper Kit	98-36139-K301
2	Dominion A2 Caliper Rebuild Kit	98-36140-K101
	Dominion T2 Caliper Rebuild Kit	98-36140-K301
	Dominion A2 Type 100 Sintered Pad Kit	98-36141-K101
3	Dominion A2 Type 106 Semi-Metallic Pad Kit	98-36141-K102
	Dominion T2 Type 106 Semi-Metallic Pad Kit	98-36141-K103
4	Dominion T2 Pad Pin Kit	98-40586-K002
5	Bleed Plug 10 Pack Kit	98-21972

BRAKE HOSE PART LIST

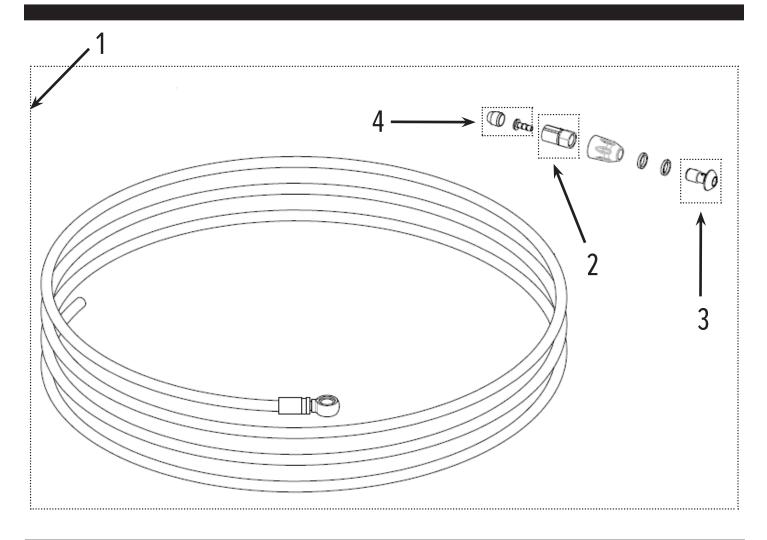

ITEM #	PART DESCRIPTION	KIT NUMBER
1	Black Brake Hose With Banjo Kit	98-36138-K001
	Black Brake Hose With Titanium Banjo Kit	98-36138-K003
2	Compression Nut 10-Pack Kit	99-16603
3	Standard Banjo Bolt Kit	98-36142-K001
4	Insert And Olive 2-Pack Kit	98-39471
	Insert and Olive 10-Pack Kit	98-41490

GLOBAL HEADQUARTERS & HAYES BICYCLE GROUP USA

5800 W. Donges Bay Rd. Mequon, WI 53092

HAYES BICYCLE GROUP EU

Dirnismaning 20 a 85748 Garching (b. Munich) Germany

HAYES BICYCLE GROUP ASIA

16F, No. 37, Sec. 3 Mincyuan E. Rd. Zhongshan District

╆╬┲╕Ұ┲╘

f	facebook.com/ManitouMTB instagram.com/ManitouMTB
	#ScienceofSmooth

REYNOLDS





